


SELF-SEALING LOCKING NUTS

INSTALLATION INSTRUCTIONS INSTRUCCIONES DE INSTALACIÓN DIRECTIVES D'INSTALLATION

These self-sealing locking nuts are installed like any ordinary nut. A high-pressure seal is formed along the thread's contact-surface when torqued. There is no need for gaskets or sealants of any kind. Fully adjustable and reusable, they can be mounted either on top or below the installation surface as shown in the illustrations below.

Estas tuercas de fijación auto-sellantes se instalan como las tuercas regulares. Un sello de alta presión se forma a lo largo de la superficie de los hilos de rosca cuando la tuerca es apretada. No se necesitan juntas o sellantes de ningún tipo. Estas tuercas son completamente ajustables y reutilizables. Como se muestra en las ilustraciones abajo, estas tuercas pueden ser instaladas encima o debajo de la superficie de instalación.

Ces contre-écrous autoscellants s'installent comme un écrou ordinaire. Un joint haute pression se forme au point de contact des filets, lors du serrage. Pas besoin de joints ni de scellants. Les écrous sont ajustables et réutilisables. Comme l'indiquent les illustrations, ils peuvent se monter sur ou sous la surface d'installation.

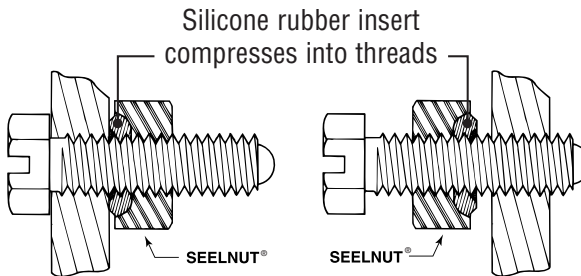

APM HEXSEAL®
When Just Fastening Isn't Enough®